

# MANUAL FOR BLUETOOTH SPEAKER S22B

For correctly operating, please read this manual carefully before using. Any content revise of the manual won't declare again, and we are not responsible for consequence caused by fault or oversight of this manual.



## FEATURES:

- 1.0ch Outdoor Bluetooth Speaker;
- Outdoor HIFI Bluetooth speaker output very clear sound and dynamic sound effect;
- With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad;
- Secure simple pairing for user-friendly operating;
- 10 meters operating range;
- With Line-in function suitable for PC, MID, TV and other radio device;
- With USB&Micro SD card support;
- Built-in lithium rechargeable battery 1500mAh;
- With carry strap, easy to take out ;

## ACCESSORIES:

Charging cable, Audio cable, User manual

## **SPECIFICATION:**

Bluetooth range            up to 10 meters

Speaker:                    Horn Size: 4 inch  
                                  Horn output: 12W, 4Ω


Connections:              USB/Micro SD (reader) card  
                                  supporting: Maximum: 32GB  
                                  Aux-in 3.5mm jack connection

Power supply:              Built-in rechargeable lithium battery 1500mAh  
                                  (2 hours playtime with max volume)

Recharge power:          DC 5V 1~2A (USB-to-micro USB charging cable  
                                  included)

Product size:              Ø136\*254mm

## INSTRUNCTION FOR APPEARANCE AND KEY:

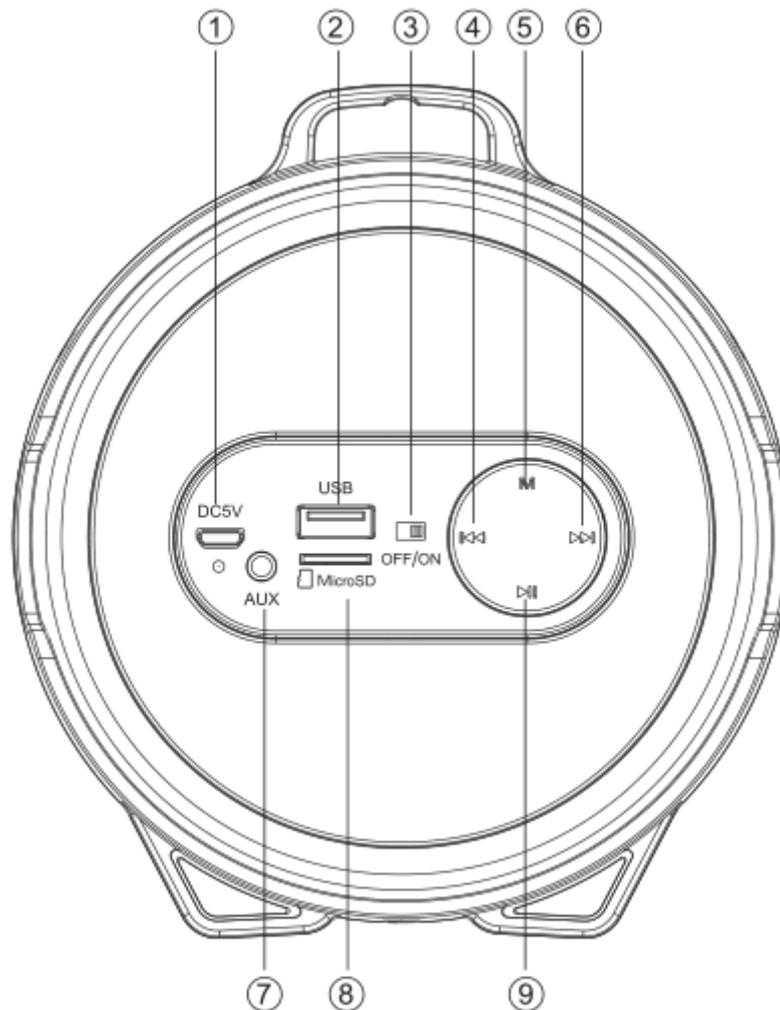

1. Charging jack
2. USB port
3. ON/OFF button
4. Backward/Volume down
5. Mode (Switch Bluetooth, USB disk, Micro SD card, FM and AUX-IN state)
6. Forward /Volume up
7. Aux-in jack
8. Micro SD card slot
9. Play/Pause

### Bluetooth connection:

1. Turn the power button to "ON", The LED light turn blue and twinkle quickly and beep twice
2. Activate *Bluetooth* of mobile phone and search for device name "S22B" then connect it. The blue LED light twinkle slowly and beep three times once connected successfully.
3. Play the music from your mobile phone and enjoy.
4. Press Forward or Backward button on the device or on Mobile phones to select songs you like.

5. Press Play/Pause button on the device or on Mobile phones to play/pause the music
6. Use the Bluetooth device to adjust volume up and down. Or long press the Forward or Backward button to adjust volume up and down.

### **Playing music from USB disk & Micro SD card:**

1. Turn the Power button to "ON".
2. Insert Micro SD card or USB flash disk into slot, the music stored will be played automatically and blue LED light always keep lighting.
3. Under playing mode, short press Forward or Backward to select songs you like, Or long press the Forward or Backward button to adjust volume up and down.
4. Press PLAY/PAUSE to play or pause.
5. Please turn the Power button to "OFF" while without use.

Remark: Under Bluetooth playing mode, insert Micro SD card or USB will disconnect the Bluetooth and switch to play from USB or Micro SD card. You can press the MODE button to switch to Bluetooth mode again.

### **How to Use FM Radio:**

1. Under FM radio state, the audio cable provided treat as antenna. Please Insert the audio cable to get the best FM signal before using.
2. Turn the power button to "ON", press the "MODE" button to switch to FM radio state.
3. Under playing mode, short press "Play/pause" button to auto search the FM Channel and store it automatically.
4. Press Forward or Backward button to change the stored FM channel.

### **AUX-IN:**

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this device to Enjoy playing music .

Under any playing mode ,When you use the audio cable to connect the device, it will auto switch to the AUX mode .

Under AUX mode, all functions can be controlled by external device.

### **Battery Charging:**

1. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other charger with DC5V output, the red charging indicator keep lighting.
2. Charge time should be 2-4 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.

**Note:**

1. The unit will operate without the wire connection using the lithium battery. The amount of battery life depends on how hard the unit is working. Heavy, loud, bass music will use more energy to produce than spoken word.
2. The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in the fire.
3. When cleaning the product, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.